

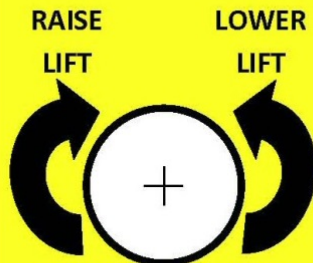


WARNING

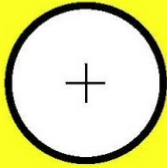

- Lift must be level when the boat is on the lift. Damage to the lift will occur if the lift is not level.
- **NEVER** adjust the legs with the weight of the boat on the lift. Adjusting screws with boat loaded on lift will cause damage to the leg adjustment assemblies and could result in **severe personal injury**.
- To prevent electric shock, only use a cordless drill to adjust legs.
- Drill will come to a sudden stop when legs are fully extended or retracted.
- Dropping the lift from excessive height will cause damage to the leg adjustment assemblies.

LUBRICATE ALL THREADED RODS YEARLY

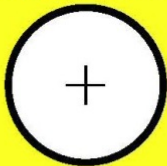

LUBRICATION INSTRUCTIONS

- Retract screw legs until the hole in the inner leg is seen in this hole. The threaded rod should be visible.
- Apply a generous amount of lithium grease to the threaded rod through the above hole.
- Lengthen the threaded rods out until all the legs are completely extended.
- Lower lift by retracting all the legs back to your desired height.

Lift Screw Legs

165-95340 (Set of 4 Legs and Pin Kit) - 3000# Boat Lifts
165-95440 (Set of 4 Legs and Pin Kit) - 4000# - 6000# Boat Lifts
165-95740 (Set of 4 Legs and Pin Kit) - 7000# - 8000# Boat Lifts

165-95345 (Set of 2 Legs and Pin Kit) - 3000# Boat Lifts
165-95445 (Set of 2 Legs and Pin Kit) - 4000# - 6000# Boat Lifts
165-95745 (Set of 2 Legs and Pin Kit) - 7000# - 8000# Boat Lifts

Part numbers listed for purchasing screw legs with new boat lift.

Pin Kit (165-90100) (Set of 4)


4 – 5/8" x 3.325" SS Clevis Pins	4 – 1/8" Cotter Pins
4 – Warning Decals	1 – Hex Bit

Pin Kit (165-90150) (Set of 2)

2 – 5/8" x 3.325" SS Clevis Pins	2 – 1/8" Cotter Pins
2 – Warning Decals	1 – Hex Bit

The Lift Screw Legs makes leveling your Pier Pleasure boat lift easy. The standard lift screw leg has a 48" inner leg and a 36" long ACME threaded screw. This allows the leg to extend 32" from being fully retracted. Using the provided hex bit and cordless drill, the lift raises and lower quickly and effortlessly. Never raise the lift with weight of the boat on the lift.

To add Lift Screw Legs to any existing Pier Pleasure boat lift, 5/8" holes can be drilled in the four uprights.

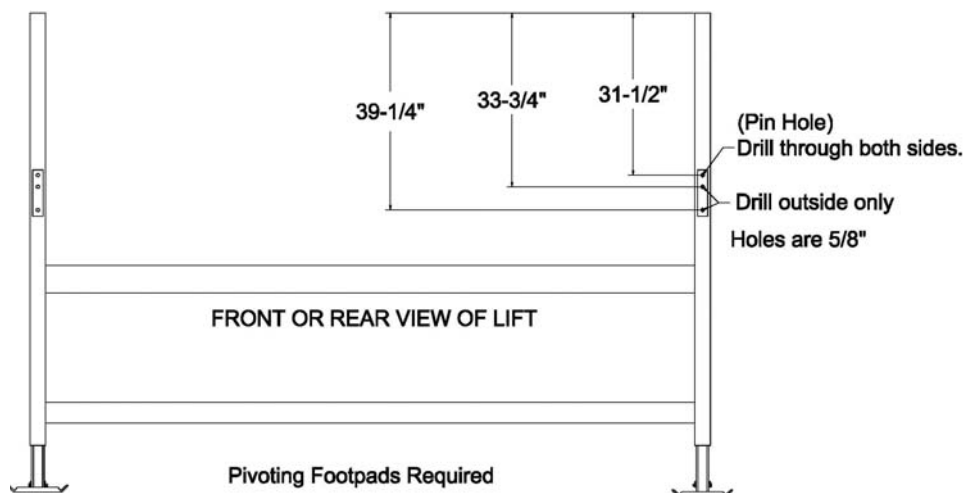

WARNING



RAISE
LIFT

LOWER
LIFT



- Lift must be level when the boat is on the lift. Damage to the lift may occur if the lift is not level.
- To prevent damage to the leg adjustment assemblies, never adjust the legs with the weight of the boat on the lift.
- To prevent electric shock, only use a cordless drill to adjust legs.
- Drill may come to a sudden stop when legs are fully extended or retracted.
- Dropping the lift from excessive height will cause damage to the leg adjustment assemblies.

LUBRICATE ALL FOUR
THREADED RODS YEARLY



LUBRICATION INSTRUCTIONS

- Completely lower lift until all four footpads are fully retracted.
- Apply a generous amount of lithium grease to the threaded rod through the above hole.
- Extend the threaded rods out until all the legs are completely extended.
- Lower lift by retracting all the legs back to your desired height.